



VALVE STEM AND HANDLE REPLACEMENT ON RINGLET HEAD INSTALLATION AND OPERATION GUID!



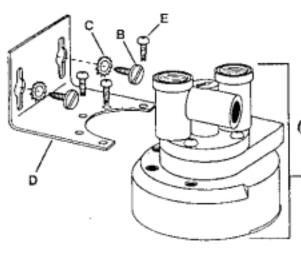



- Shut off water to the filter.
- Turn valve handle to closed position. (counterclockwise).
- Remove valve handle screw
- 4. Using the valve handle as a "ratchet", remove old valve stem.
- Assemble new valve stem to head.
- Using valve handle, turn valve stem counterclockwise until tight.
- Position valve handle in the "11 o'clock" position - important!! This position is necessary for proper water shut-off for Everpure cartridge replacement.
- Re-assemble screw to valve handle.

VALVE HANDLE REPLACEMENT

- Remove screw from valve handle.
- Place new valve handle in the same position.
- Re-assemble screw to valve handle.

KEY LETTER	DESCRIPTION	PART NUMBER
Α	QC4 Ringlet Head Assembly	3076-37
В	Mounting Screw	3061-96
i c	Star Washer	3062-04
D	Mounting Bracket	3055-34
E	Bracket Screw	3062-03
F	Valve Stem	5896-00
G	Valve Handle	3034-52
. н	Valve Handle Screw	3012-00