

# Snapshot

The MA-Q15 is a 15" Qwik-Twist cartridge that contains a proprietary blend of minerals. In select systems the cartridge adds a consistent blend of minerals, buffering the aggressive nature of Reverse Osmosis (RO) water.

# Cartridge Benefits

- Adds a balance of minerals, including calcium and magnesium, to buffer against the aggressive nature of Reverse Osmosis (RO) water.
- Qwik-Twist cartridge makes changing the filter quick, easy and sanitary.

Model: MA-Q15

Part #: 300-05855

#### REPLACEMENT CARTRIDGE

ITEM #:	_ QTY:
IOB NAME/NUMBER	




## **Application**

Used in conjuction with OP and BWS Reverse Osmosis Systems

## **Installation Tips**

- Insure cartridge is designed to replace the existing cartridge.
- Do not exceed cartridge specifications for temperature and pressure.
- Allow 3" clearance below system for filter cartridge removal and replacement.
- No activation procedure or flushing is required for cartridge to perform as specified.
- Feed-water connection to system should be COLD only.



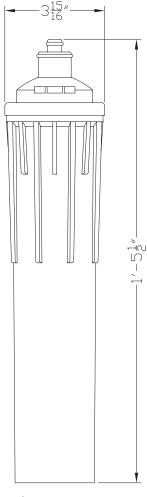

#### WARNING: Cancer and Reproductive Harm-www.P65Warnings.ca.gov.

#### Warranty

Replacement filter cartridges are warranted for defects in material and workmanship only. Service life of replacement filter cartridges varies significantly with local water conditions and volume and thus cannot be warranted. Furthermore, separation membranes are equally susceptible to feed water conditions (e.g. presence of iron, alum and silica) and shall be warranted only for defects in construction. Membrane failure due to fouling, hydrolysis, oxidation or other damage caused by the local water conditions is not covered under warranty. For complete warranty information, contact OptiPure customer service or go to www.optipurewater.com.

Dealer/Distribu	itor Info:		

# Model: MA-Q15

Part #: 300-05855

### Specifications

Cartridge	
Dimensions (Height x Width x Depth, Inches)	17.5"h x 4"w x 4"d
Operating Pressure Range	10 - 125 psi (0.7 - 8.6 bar)
Inlet Water Temperature Range	35° - 100°F (2° - 38°C)
Shipping Weight	10 lbs.

### System(s) Cartridge Used In

Model	Qty	
BWS350 RO Systems	1	
OP350 RO Systems	1	
BWS1500 RO Systems	1	

It is recommended that pre/post-filters and mineral addition cartridges are changed every 6 months, when capacity is reached or when feedwater pressure or flow becomes inadequate.

Membrane life varies depending on feedwater conditions and pre-filter maintenance. It is 12-18 months under typical conditions, but it can be as long as 3-5 years.

This product is for commercial use only and must be installed and maintained according to manufacturer's guidelines.

Do not use on water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.

#### OptiPure, A Division of Aquion, Inc.

101 S. Gary Ave., Suite A Roselle, IL 60172 p: 972.881.9797 e: info@optipure.net www.optipurewater.com